

## Standard Telecaster®

No Ground Jumpers are depicted. Make sure all metal is properly grounded.

