

## Telecaster With Flipped Control Plate

Master Volume First

Master Tone

3-Way Blade Switch

Note: No jumpers are depicted. Make sure all metal is properly grounded.

