

"Half" Blender Pot Installation

The Half Blender Pot only works when you are in position 1 (Bridge) or position 2 (Bridge & Middle).

