

Telecaster Deluxe Wiring

2 Volume, 2 Tone Gibson Lead 3-Way Right Angle Toggle Switch Note: No jumpers are depicted. Make sure all metal is properly grounded.

