




CONGRATULATIONS!

Congratulations on the recent purchase of your custom-made Telecaster® Control Plate. A lot of time and effort went in to making sure this control plate is the highest-quality control plate you can find. Here's how to install your Control Plate:

INSTALLATION IS REALLY SIMPLE!

1. Locate **Marker Wires**
2. Un-Solder each marker wire and solder in corresponding **Pickup Wire**
3. Check all connections
4. Screw in Control Plate
5. Play, and **have fun!**

Located on the control plate are Marker Wires which are intended to be removed and replaced with the corresponding pickup wire. To remove the Marker Wire, de-solder it at its location, and solder the correct pickup wire in its place.

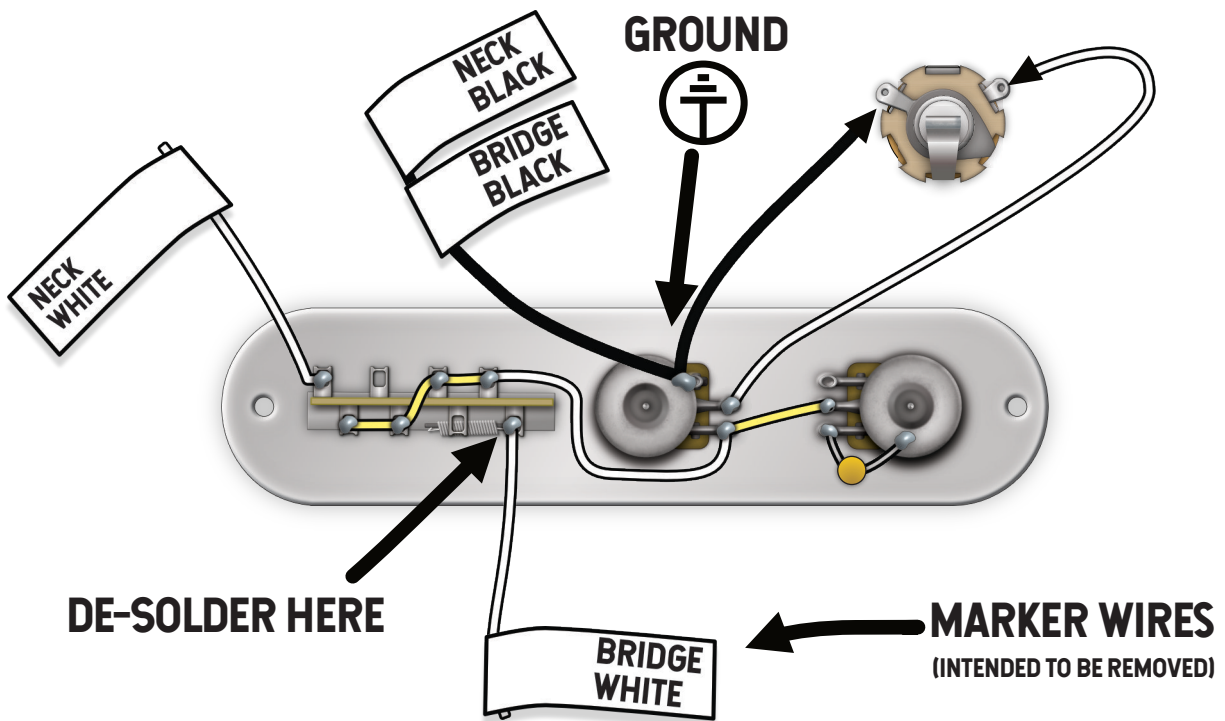

TIPS:

1. Use Leaded Solder, with a Rosin Core
2. Use a Soldering Pencil, not a 'Gun'
3. Do not overheat solder points

OUTPUT JACK:

Output Jacks are installed into a Jack Plate, or threaded into an Electrosocket® cup.

Hardware is included for installation into a Jack Plate.



Due to certain modifications, some wires can be difficult to solder. For these modifications, we recommend taking your guitar to an experienced luthier for installation.